

**To remove the vacuum gauge:**

1. Grasp the gauge & stopper tab and pull out of the breastshield.



[www.medela.com](http://www.medela.com)

Medela, Inc., P.O. Box 660,  
McHenry, IL 60051-0660, USA  
Ph: 1-800-435-8316  
Fax: 1-815-363-1246  
Email: [customer.service@medela.com](mailto:customer.service@medela.com)

Printed in the USA. Medela is a registered trademark  
of Medela Inc. All rights reserved.

1547524 A 0605 © 2005 Medela, Inc.



# Vacuum Gauge Instructions



\* This gauge is intended as a reference tool only,  
not as a means of accurate measure.


**This vacuum gauge may be used with Medela® electric & manual breastpumps.**

**To use the vacuum gauge:**

**1.** Insert the vacuum gauge into the hole in the rubber stopper.



**2.** The pull-tab on the rubber stopper should be in back of the vacuum gauge.

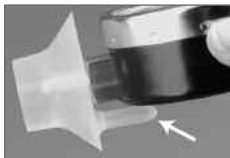

**3.** Insert the rubber stopper with gauge into the breastshield.



**4.** Ensure a complete seal by firmly pressing in all edges of the stopper.



Once the vacuum gauge is properly inserted into the breastshield and the kit and pump are fully assembled, turn on the pump to measure the vacuum level. See your pump's service instructions for specified vacuum levels.

**Note:**

1. When taking a reading, some pumps will require switching to single pumping to achieve full vacuum.
2. Vacuum levels will vary based on weather and elevation. Refer to your pump's service instructions for vacuum levels based on elevation.
3. Dropping or damaging the vacuum gauge may cause incorrect readings.
4. This gauge is intended as a reference tool only, not as a means of accurate measure.